

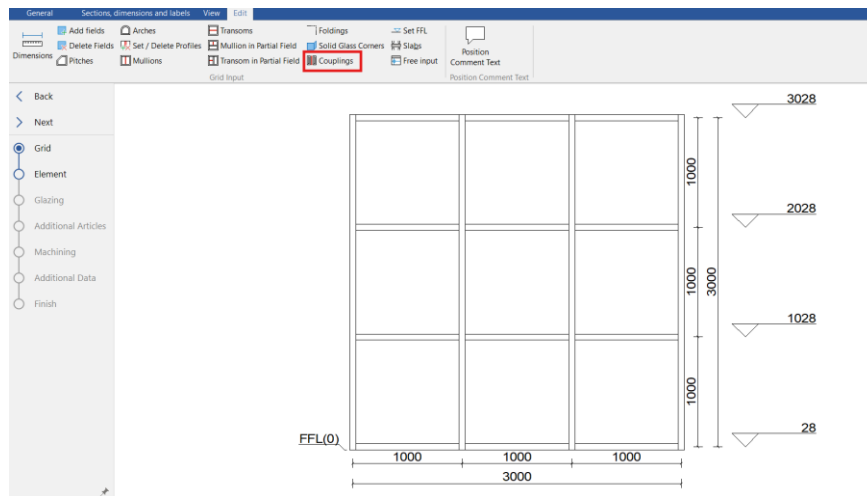


Example of insert M78007 for the system M78


1) In example grid 3X3 select couplings

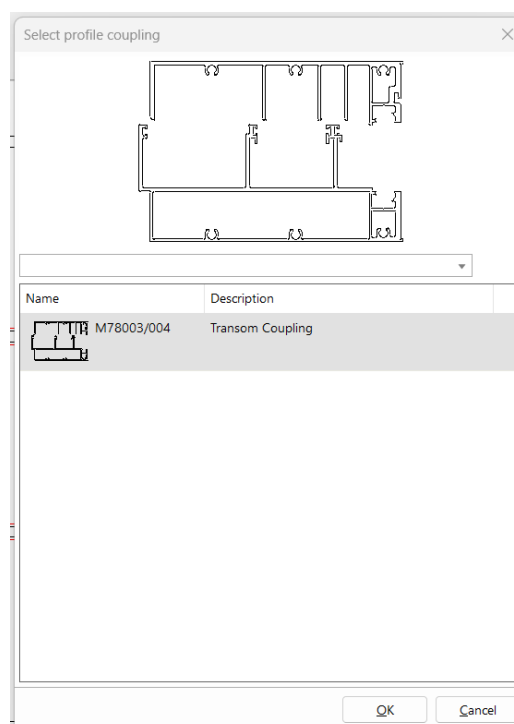


2) Select the transom and then the coupling M78003/004

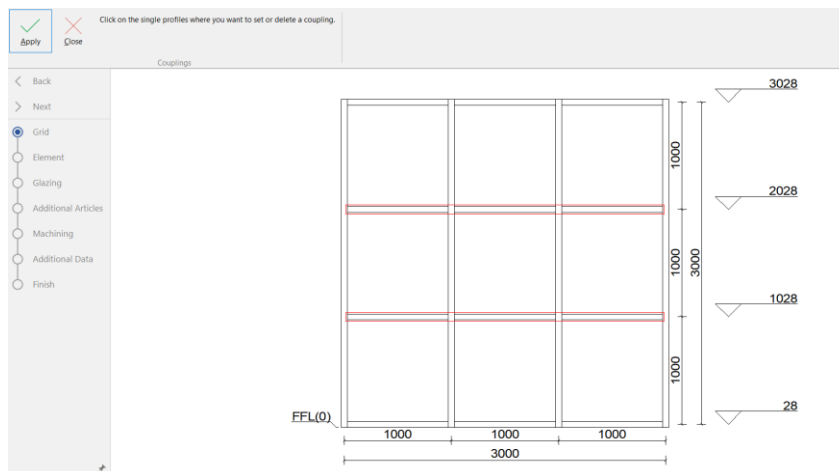



3) Select the 2 upper fields

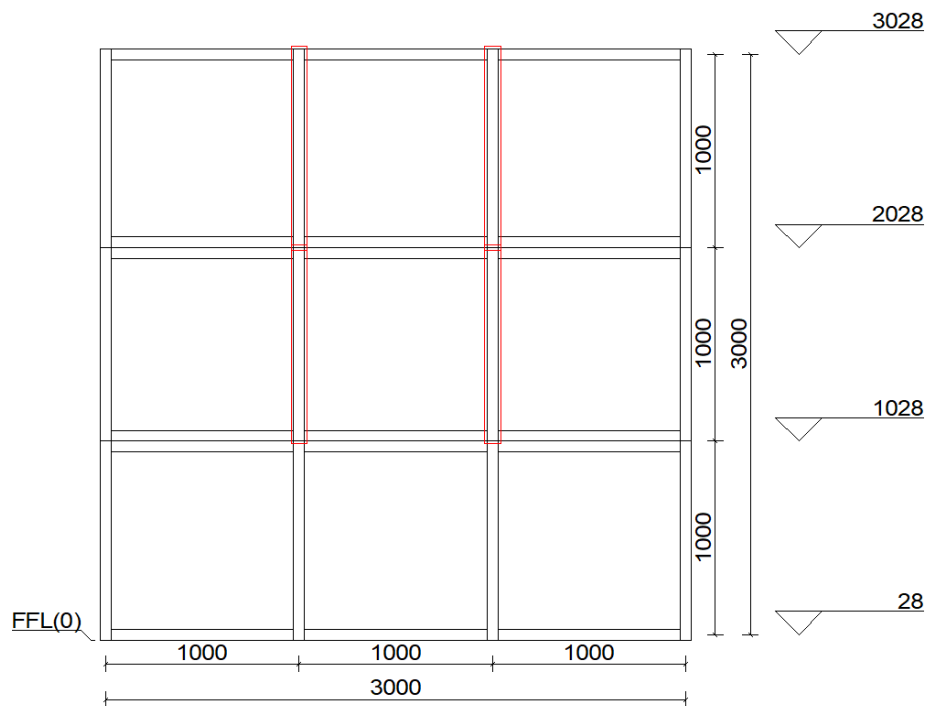

4) Choose the mullion coupling M78001/002

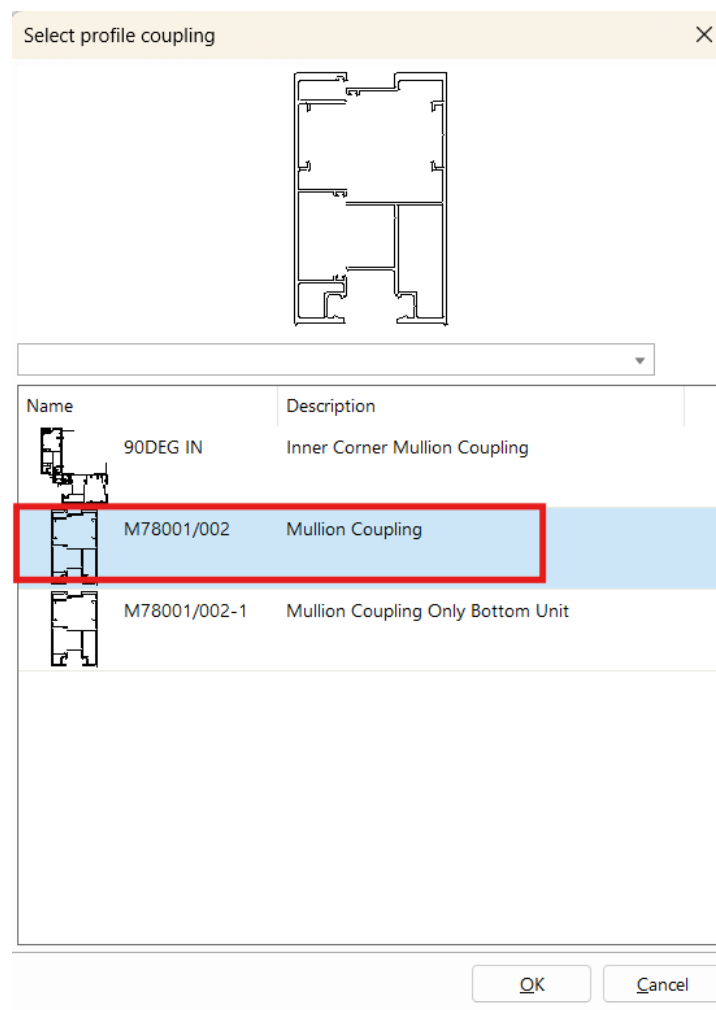

5) Select the bottom mullions and then mullion coupling only bottom unit

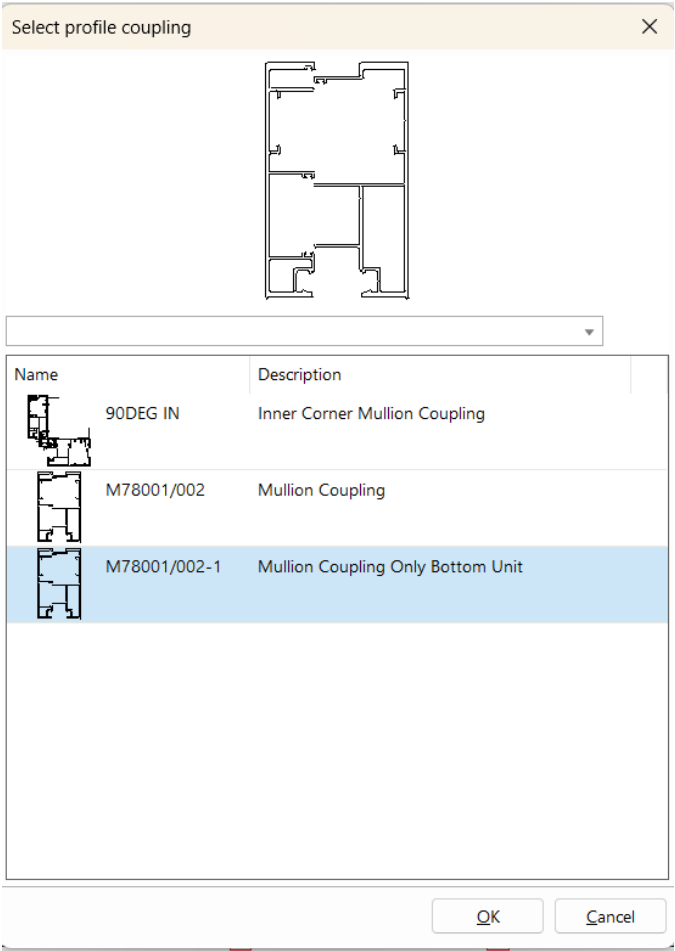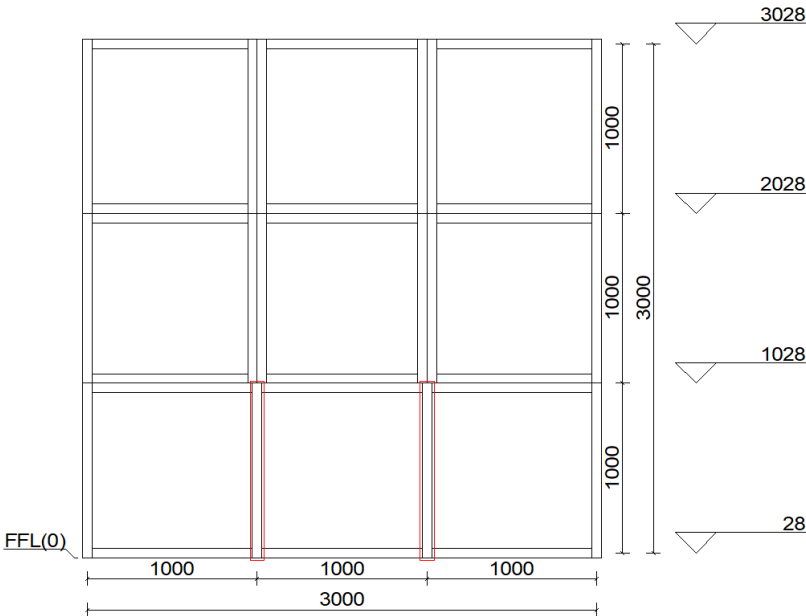

6) In the assembly list, the position has 8 pcs of the profile M78007

1 (1) Pcs. 312-78-003-03	POLYAMIDE M78 FOR 28-32MM GLASS	383,4	I - I	D / 8
Connection: 2x 01 (Screw)				
8 (8) Pcs. M78007	CURTAIN WALL ADDITIONAL PROFIL	400,0	I - I	